

## Testing:

Once connected to the 240V UPS backup mains supply, ensure the UPS unit has been allowed to charge. Conduct the following tests:

- For the first test, the lamp must remain illuminated for at least 2 hours after disconnection from the mains supply running from the UPS battery.
- Subsequent tests require the unit to illuminate for at least 90 minutes. The results of all tests are required to be recorded in a service logbook, which is to be kept on-site at all times. If the unit fails to remain illuminated for the requisite time, remedial action must be taken to repair the situation and once completed, the unit must pass a subsequent test. For more specific information, please refer to the current edition of the AS 2293.3 Standard.

## Cleverfit Maintenance:

### Lamp Replacement:

- Use only the LED Lamp Strip recommended in the Spares List of this instruction.
- To replace the lamp strip, remove the 4 self-tapping screws, remove the 2 threaded screws and remove the body cover. Disconnect the signal cable and install the new lamp strip.

## Trouble Shooting:

Below are a list of common problems and their possible causes.

**Fault:** The Status LED indicator and main lamp is not illuminated.  
**Check:** A.C. is connected and is turned on. Test Switch for damage.

**Fault:** Lamp does not illuminate in emergency mode.  
**Check:** A.C. is connected.  
Lamp is correctly inserted.  
UPS battery condition

## Rated Emergency Lumen Output in accordance with AS2293.1 (refer to spacing tables for installation positions):

C0=E2 C90=E2

## Warranty:

The manufacturer warrants the goods against defects solely due to faulty parts or workmanship of the manufacturer for a period of 24 months from the date of purchase. This warranty covers the repair or replacement of the goods at the discretion of the manufacturer, upon the goods being returned to the nearest branch of the manufacturer at the clients cost. Any other warranty or guarantee, expressed or implied, to the extent permitted by law, is expressly excluded. The manufacturer shall not be liable for any costs or consequential losses that may arise through the use of any of the manufacturers' products. Installation or operation of this product in a manner NOT complying with this instruction leaflet will automatically void any and all warranties.

# L10 Cleverfit LED UPS Exit

## With LED Control

### Installation & Maintenance Instruction Leaflet



#### Victoria (Head Office & Manufacturing)

195 Chesterville Rd  
Moorabbin VIC 3189  
Phone: +61 3 9559 2700  
Fax: +61 3 9559 2799

#### New South Wales

Phone: +61 2 8805 6400  
Fax: +61 2 8805 6444

#### Queensland

Phone: +61 7 3442 9700  
Fax: +61 7 3442 9777

#### South Australia/Northern Territory

Phone: +61 8 8301 8800  
Fax: +61 8 8351 8286

#### Western Australia

Phone: +61 8 9248 3720  
Fax: +61 8 9248 3725

Designed in Australia to comply with the requirements of AS2293.3

## Models:

LCFLED-DALI-LEDCTRL-UPS

Cleverfit LED Exit – DALI LED Control-UPS

## Spare Parts:

8002430 – PCA: Duris P5 6 LED Strip

8002331 – PCA: DLED Cleverfit L10 Drive , UPS

8002202 – PCA: DALI Node-LED Control,

## Important:


It is illegal for anyone, except for a licensed electrician to install or maintain this product. Before installation, ensure that the electricity supply has been switched off and isolated. Installation must be carried out in accordance with the relevant Australian and International Standards.

Installation:

The L10 Cleverfit LED Exit (LCFLED) can be installed either Ceiling or Wall Mounted and can be mounted perpendicular to a wall using the (optional) Cleverfit Cantilever Bracket. The LCFLED uses a “slide connect bracket base” that is mounted and wired into position first. The main body can be installed once the base is wired or later to avoid damage during the construction phase. Please follow the steps below to install the Cleverfit Exit:


- Disengage the slide connect bracket from the exit body. Position the base in the mounting position.
- Using the bracket as a guide, mark 2 holes for mounting and one for mains access. Then install the bracket using appropriate fixings (not supplied).
- Connect the 240VAC supply to the mounting bracket.
- Configure all the mounting parts and cable entry points as below (if required) and engage the body into the slide connect bracket. Apply mains power and check that the Cleverfit Exit is operational.

DIMENSIONS (mm)

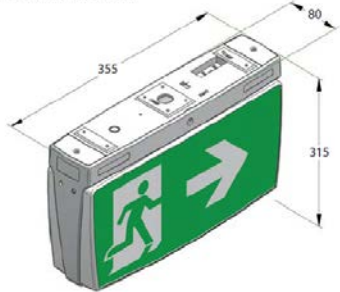


Cable Entry Point – Top of bracket for ceiling mount, 20mm diameter, located in centre of bracket.

Mounting Bracket - front view

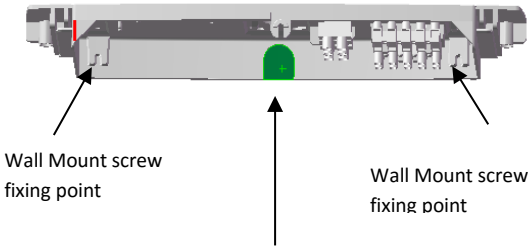

Cable Entry Point – Rear of bracket for wall mount, 20mm diameter, located in centre of bracket. Note: Bracket shown from front with the terminal block cover removed.

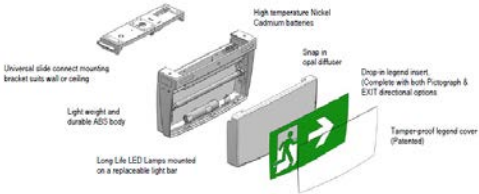

Ceiling mount - screw fixing points. (Same other side)

**Changing Exit Legend Inserts:** The Cleverfit Exit uses Clevertronics patented “Tamper proof” Exit legend cover and comes complete with spare legend inserts to enable straight on, left or right arrow as well as SS/DS combinations.

To change an Exit legend insert first remove the diffuser. The clear tamper proof cover is held in place by 3 locking tabs in the top inside area of the diffuser. Use a tool to disengage and push the locking tabs through to release the cover and remove the insert, replacing it with the desired one. When double sided is required remove the cardboard insert from the second side when adding decal.

To re-install the clear cover, first engage the 3 small lugs on the bottom of the cover into their respective recesses in the diffuser. Once sure the lugs are located, and then the 2 side lugs, carefully push the 3 locking tabs back in, to complete the process.

DALI EM Option

Cleverfits with part numbers LCFLED-DALI are fitted with DALI modules (nodes) that facilitate connection and integration to 3<sup>rd</sup> Party Lighting Control Systems. Before installing the LCFLED-DALI please confirm that the Lighting Control System has the capability to monitor DALI Emergency Luminaires. The LCFLED-DALI will be addressed and configured into the control system by the Lighting Control System Commissioning Technicians and not Clevertronics.

State	LED Operation
Commissioned/ Un-commissioned	LED on Solid (Green)
Emergency Light Test in progress	LED flashes at 1s On (Yellow) & 1s Off
“IDENTIFY COMMAND”	Fitting goes into emergency mode for 10 seconds

A 2-way “figure 8” cable and terminal block facilitates the connection to the DALI network. DALI connections are marked as Da Da.