

After Power ON, the Status LED on a Clevertest Plus enabled fitting will display a rapid Green or Red flashing for a period up to 2 minutes.

## Zoneworks and DATA Monitored Options

LP batten with part numbers -ZW and -DATA are fitted with Zoneworks communications modules (nodes). These fittings are monitored using either Powerline Carrier Technology that utilising the power cable to provide data communication or a dedicated data cable to/from data router installed on a dedicated data trunk connected to a central Server (can also be connected via Ethernet/Internet/Fibre). Zoneworks software on the server is used to monitor, coordinate testing and collate test data from each batten. Zoneworks Battens can be commissioned by a single push of the test switch or scanning of the supplied barcode. The LED Test Switch indicator provides a multifunction indication of the status of the Fittings during testing and normal operation:

State	LED Operation
Commissioned	LED on Solid (Green)
Un-commissioned	LED flashes at 0.5Hz (0.5s Green, 0.5s Yellow)
Emergency Light Test In Progress	LED flashes at 3s On (Yellow) & 0.5s Off

In the case of the DATA version a 2-way "figure 8" cable and terminal block facilitates the connection to the DATA network via a multi-drop bus (daisy chain connection). For further information of installation of a Zoneworks LW system, please refer to the Zoneworks Users Guide and Commissioning Guide (incl. DATA version)

## DALI EM Option

LP batten with part numbers -DALI are fitted with DALI modules (nodes) that facilitate connection and integration to 3<sup>rd</sup> Party Lighting Control Systems. Before installing the -DALI batten, please confirm that the Lighting Control System has the capability to monitor DALI Emergency Luminaires. The batten will be addressed and configured into the control system by the Lighting Control System Commissioning Technicians and not Clevertronics.

State	LED Operation
Commissioned/ Un-commissioned	LED on Solid (Green)
Emergency Light Test in progress	LED flashes at 1s On (Yellow) & 1s Off
"IDENTIFY COMMAND"	Fitting goes into emergency mode for 10 seconds

A 2-way "figure 8" cable and terminal block facilitates the connection to the DALI network OR a 5/6way "structured wiring system" lead and plug facilitating the power and DALI connection. DALI connections are marked as Da Da.

# LP™ Sustained Emergency LT LED Battens

## Installation & Maintenance Instruction Leaflet



**Victoria (Head Office & Manufacturing)**  
195 Chesterville Rd Moorabbin VIC 3189  
Phone: +61 3 9559 2700  
Fax: +61 3 9559 2799

**News South Wales**  
Phone: +61 2 8805 6400  
Fax: +61 2 8805 6444


**Queensland**  
Phone: +61 7 3442 9700  
Fax: +61 7 3442 9777

**South Australia/Northern Territory**  
Phone: +61 8 8301 8800  
Fax: +61 8 8351 8286

**Western Australia**  
Phone: +61 8 9248 3720  
Fax: +61 8 9248 3725

**New Zealand**  
Phone: +64 800 548 448

**Designed in Australia to comply with the requirements of AS2293.3: 2005 and AS/NZS CISPR15: 2011.**


NOTE: Standard product codes with this symbol  are enabled with Clevertest Plus capability. Please refer to the operation guide supplied with the product for details.

## Models: CBSxxxS-LT-zz-aa-yyy

### Lamps:

xxx = 1L2	1 x CorePro LED tube 600mm 8W840 C G	800lm
xxx = 2L2	2 x CorePro LED tube 600mm 8W840 C G	1600lm
xxx = 1L4	1 x CorePro LED tube 1200mm 20W840 C G	2100lm
xxx = 2L4	2 x CorePro LED tube 1200mm 20W840 C G	4200lm

### Testing:

Manual Test	yyy = Blank	Zoneworks DATA	yyy = DATA
Zoneworks	vyv = ZW	DALI Compatible	vyv = DALI
Clevertest	yyy = CT	(NOTE: Products supplied with the Clevertest Plus Symbol  are activated with Clevertest PLUS capability. Please refer to the operation guide supplied with the product for details).	

### Options:

Microwave Sensor aa = MS

### Diffuser:

Wire Guard zz= WG  
Prismatic zz= DIF

## Spare Parts:

1550050	BATT: LP 3.2V 3200mAh 70mm lead,no BRKT.
1100634	LP, PCA Head & 1 LED
3170030	CorePro LED tube 600mm 8W840 C G
3170080	CorePro LED tube 1200mm 20W840 C G
CLIFE-CKIT-NP	Lifelight, Control Only, LP

## Important:

It is illegal for anyone, except for a licensed electrician to install or maintain this product. Before installation, ensure that the electricity supply has been switched off and isolated. Installation must be carried out in accordance with the relevant Australian and International Standards.

## Installation:


This LP Emergency batten can be wall or ceiling mounted.

- Refer Images and Dimensions below for the mounting hole, cable access and other dimensions.
- Position the batten in the desired location.
- Mark out the fixing points on the mounting surface.
- Install appropriate fixing hardware.
- Route power cable through the access hole.
- Fasten the batten to the surface.
- Terminate the supply cables to the appropriate terminal (as marked) in the batten
- Terminate the DALI/DATA cables to the terminals marked Da Da or DATA as applicable
- If the CTP capabilities are activated, please affix the CTP Status Label to a visible surface.

## Networking:

When installing the LP Sustained Emergency Battens on a monitored network, (ZONWORKS, DATA, DALI) simply insert the relevant Smart Node PCA.

## Images and Dimensions:

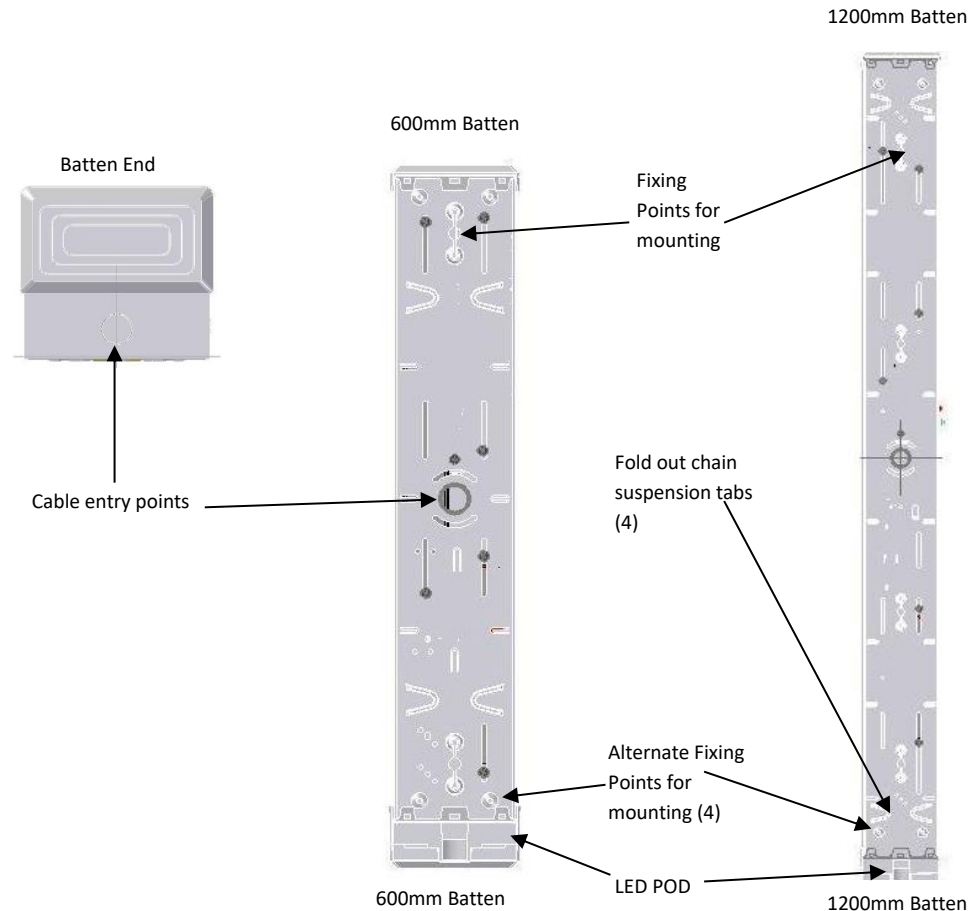

## Testing:

When the LP batten unit is connected to the un-switched active, it must be allowed to charge the battery for at least 24 hours. The emergency lamp only illuminates during a power fail. Conduct the following tests:

- The emergency lamp must illuminate for at least 2 hours after disconnection from the mains. The results of all tests are required to be recorded in a service logbook, which is to be kept on-site at all times. If the unit fails to illuminate for the requisite time, remedial action must be taken to repair the situation and once completed, the unit must pass a subsequent test.
- Press and hold Test Button or switch Off Mains Supply, check that the emergency lamp is On.
- Release the Test Button or Switch On Mains Supply, check that the emergency lamp is Off (Non-maintained operation).

## Below are a list of common problems and their possible causes:

**Fault:** The Green LED indicator is not illuminated.

**Check:** A.C. is connected and is turned on.  
Battery is connected.  
Test Switch for damage.

**Fault:** Lamp does not illuminate in emergency mode.

**Check:** A.C. is connected.  
Lamp is correctly inserted.  
Battery is connected

**Fault:** Lamp illuminates in emergency mode, but only stays on for a short period.

**Check:** Battery has been allowed to charge for at least 24 hours.  
Battery for damage.

## Rated Emergency Lumen Output in accordance with AS2293.1 (refer to spacing tables for installation positions):

C0=D40 C90=D40

## Caution:

On many building sites, power circuits may be cut off in an uncontrolled and repetitive basis during construction. As a result, any LP battens, on these circuits, will have their batteries discharged or "cycled". The Li-ion battery in the LP batten has been selected to give excellent long-life performance in a controlled IEC 60598-2-22 testing environment. Excessive battery cycling will reduce through-life performance and may lead to premature battery failure. Battery warranty claims, as a result of such abuse, are specifically EXCLUDED from Clevertronics warranty terms.

## Warranty:

For Product Warranty information and Terms and Conditions of Sales please refer to our website <http://clevertronics.com.au/terms-conditions-sale-australia-nz/>